


BY MIRACO

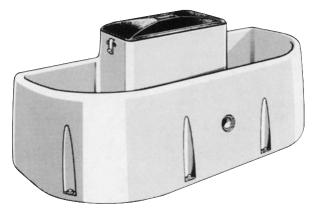

INSTALLATION INSTRUCTIONS AND SPECIFICATIONS FOR MODEL 6100

READ CAREFULLY

MIRACO

A DIVISION OF
AHRENS AGRICULTURAL INDUSTRIES, INC.
BOX 686
GRINNELL, IOWA 50112
PHONE 641-236-5822
TOLL FREE 1-800-541-7866
FAX 1-641-236-3341

website: www.miraco.com

specifications

Part 1 General

- A. Description
 - 1. BIGSpring is designed to be used as a freestall waterer and has an optional 500 watt heater when used where freezing can occur. Heater is available in 110 volt or 220 volt models.
- B. Weights & Dimensions

Model #	Capacity	Gallons	Description	Dimensions	Wt.
6100	100 head dairy	60	freestall waterer with optional heater	80" x 26" x 24"	206

- C. Material necessary for installation
 - 1. concrete for the base
 - 2. teflon tape thread sealer

Part II Materials, Products

- A. Materials
 - 1. High impact rockite, Polyethylene
 - 2. Urethane foam insulation
- B. Valve
 - 1. Miraco plastic valve
- C. Float assembly
 - 1. Stainless steel arm and Brass thumb screw, w/Polyethylene 5" x 5" ball
- D. Heat source
 - 1. Optional Miraco 500 watt heater available in 110 volt or 220 volt models.
- E. Hookup Kit
 - 1. 150 psi rubber hose w/brass ends
 - 2. 3/4" pvc ball valve
- F. Anchor bolts
 - 1. 1/2" x 5" stainless steel anchors included



Step 1Pull the paper off the back of the rubber gasket and stick to the bottom edge of the tank. This is important to keep out air and water.



Step 3Attach the 150 psi hose with shutoff valve (provided) to the PVC elbow, use teflon tape on all threaded fittings.




Step 2
Align your tank on the pad and drill 6-1/2" holes in the concrete to accept 1/2" X 5" stainless steel anchors and tighten evenly. You may need to mark the hole locations and remove the tank to drill the holes, depending on the size of your drill.



Step 4Set the entire assembly into the valve cradle.




Step 5Place the stainless steel bracket over the PVC fitting and attach with 1/4" stainless steel screws provided.

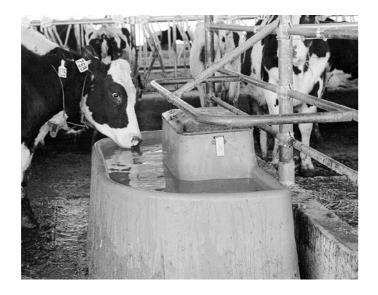

Step 7

A neck rail is recommended to prevent cows from standing in the tank. Allowing cows to stand in the tank makes the water dirty and could cause injury to the animal and can void your warranty.

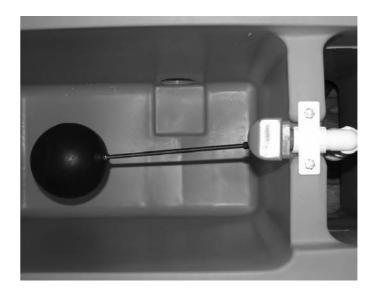

Step 6Attach float assembly and adjust water level to desired height.

